


# Installation manual Elektronikbox, Ver. H


1. Read Manual




2. Required tools

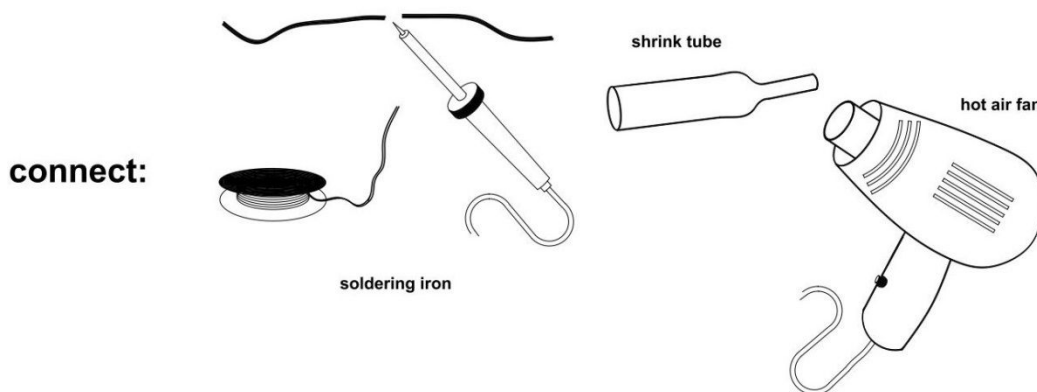


3. Connect electrical loads

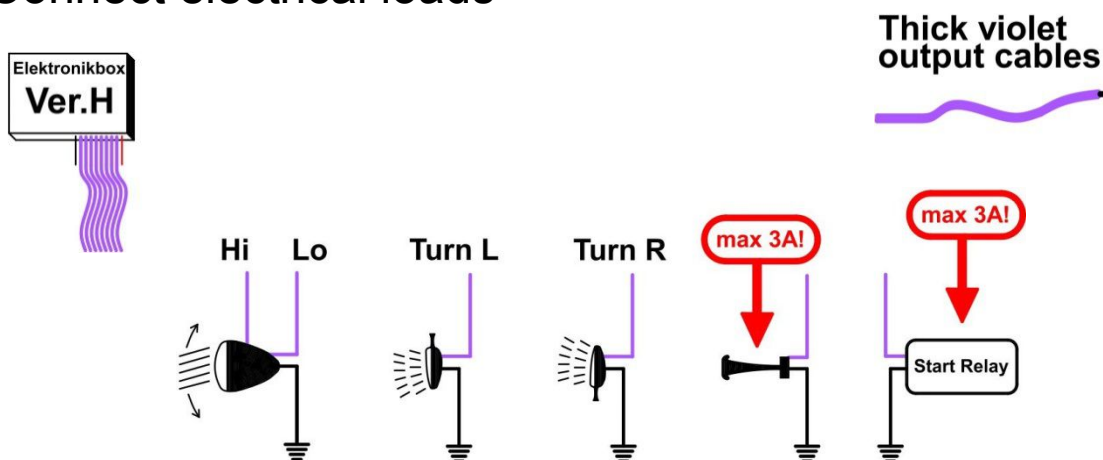


4. Connect buttons or switches

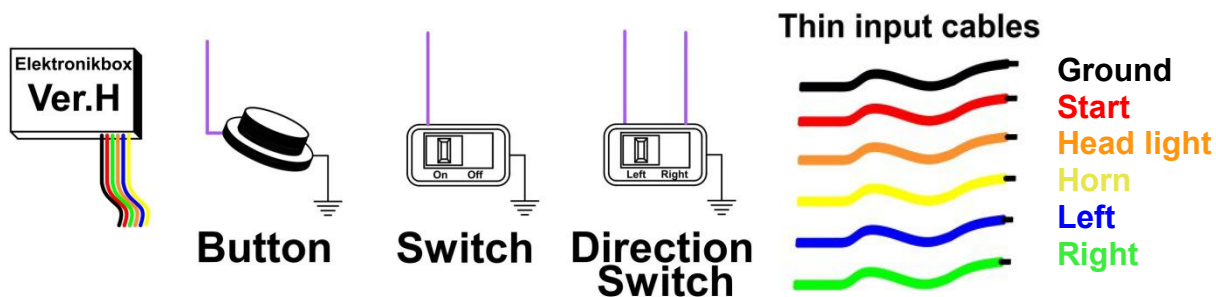

## 5. Connect power

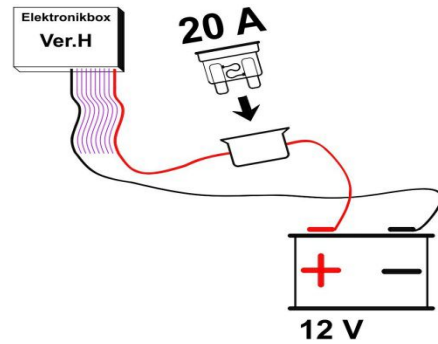

## Check functions

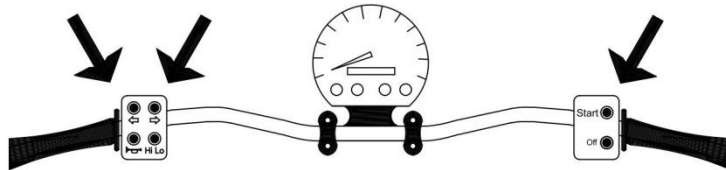

## 6. Program menu

1. Press & hold "Horn" button
2. Ignition
3. Release "Horn" button
4. You're in program menu!  
See program options in manual.
5. Step through program menu by pressing turn-buttons
6. **Important:**  
You must step through all 6 menu items, before your selections are saved!

Flashes	Mode	Left flasher button	Right flasher button	Description
1 x	Show flasher	Off	On	2 flashes when power on the H-Box
2 x	Flasher auto off	Off	On	The flashers switch off after 20 or 40 times Only possible in button mode
3 x	Flasher auto off	20 x	40 x	Number of flasher repeats before auto off
4 x	Low light	Off	On	The flashers glow with about 25 % when flasher function is off
5 x	Head light sw. / button	Switch	Button	You can use a momentary buttons or a permanent switch for head light
6 x	Flasher sw. / button	Switch	Button	You can use momentary buttons or a switch for the flasher control.
7 x	Start relay mode	Head light on	Head light off	The head light can switched off if the start button is pressed
8 x	Head light mode	Head light off	Head light on	The head light is activated after pressing the start button or is off until a light button press